

# Mounting Recommendations for Copper Tungsten Flanged Transistors

by: **Antoine Rabany, Product Engineer**  
Freescale Semiconductor Products Sector  
Phoenix, AZ

## INTRODUCTION

Because of mechanical constraints caused by the hardness of the flange material, Power RF transistors with a Copper Tungsten (CuW) flange require special care when mounted. The purpose of this application note is to describe the care to be taken for those devices with emphasis on the flatness and torque required.

## PACKAGES AFFECTED

All Copper Tungsten flanged transistors like those shown in Figure 1 (Case 395B, Case 395C, Case 398, Case 360B, Case 375B, and Case 375A).

This list is not exhaustive. In particular, all new high power discretes packages are likely to have a Copper Tungsten flange and thus follow the mounting requirements described in this note.

The surface flatness required for CuW flanged transistors is:  $\Delta h/TIR = 10$  microns/inch (0.4 mils/inch)

This is to be reached by milling the aluminum heatsink (nearly perfect flatness).

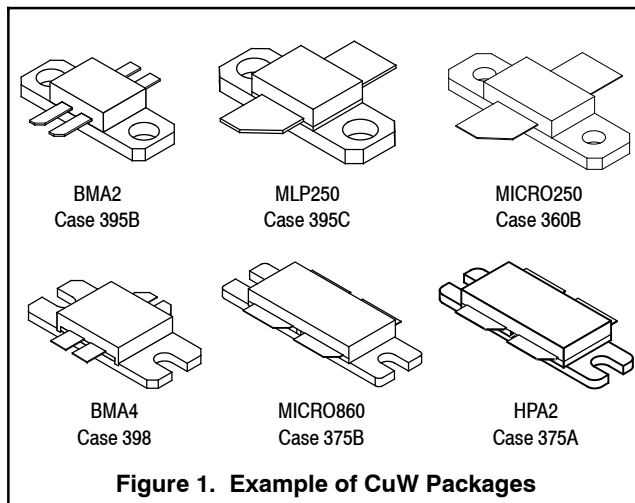


Figure 1. Example of CuW Packages

## MOUNTING SURFACE FINISH

Surface finish is the average of deviation below and above the mean value of surface height.

A finish roughness (Ra) in the order of 0.8  $\mu\text{m}$  or 0.03 mils is required (met with milled aluminum).

## THERMAL COMPOUND

The use of thermal compound is recommended provided it is applied carefully:

- Apply a thin layer of thermal compound.
- Spread the compound evenly.

Too much grease is worse than using none.


## TORQUE

Torque has to be applied in 2 steps.

- First step torque: fingertight (0.5 Kg.cm or 0.4 inch.pounds) on each side
- Second step: controlled torque (with a controlled torque screwdriver: 6 Kg.cm ( $\pm 1$  Kg.cm) or 5.2 inch.pounds ( $\pm 0.8$  inch.pounds) on each side.

Excessive torque may damage the device.

The use of washers is recommended to control the torque.

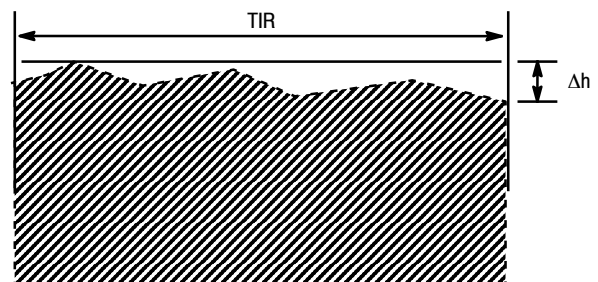

The mounting surface flatness is defined by the variance in height ( $\Delta h$ ) divided by Total Indicator Reading (TIR)

Figure 2. Mounting Surface Flatness

## MOUNTING PROCEDURE SUMMARY

1. Control the flatness of the heatsink.
2. Control the perfect cleanliness of both the heatsink and the back of the flange.
3. Make sure the device mounting holes are deburred.
4. Apply the absolute minimum of thermal compound to the flange and spread evenly.  
**Too much compound is worse than using none.**
5. Place the flange in the recess.
6. Screw the flange in two steps using washers:  
1st step torque: 0.5 kg.cm on each side  
2nd step controlled torque: 6 kg.cm  
( $\pm 1$  kg.cm) on each side  
**Excessive torque may damage the device.**
7. Solder the leads.

## **How to Reach Us:**

### **Home Page:**

[www.freescale.com](http://www.freescale.com)

### **Web Support:**

<http://www.freescale.com/support>

### **USA/Europe or Locations Not Listed:**

Freescale Semiconductor, Inc.  
Technical Information Center, EL516  
2100 East Elliot Road  
Tempe, Arizona 85284  
1-800-521-6274 or +1-480-768-2130  
[www.freescale.com/support](http://www.freescale.com/support)

### **Europe, Middle East, and Africa:**

Freescale Halbleiter Deutschland GmbH  
Technical Information Center  
Schatzbogen 7  
81829 Muenchen, Germany  
+44 1296 380 456 (English)  
+46 8 52200080 (English)  
+49 89 92103 559 (German)  
+33 1 69 35 48 48 (French)  
[www.freescale.com/support](http://www.freescale.com/support)

### **Japan:**

Freescale Semiconductor Japan Ltd.  
Headquarters  
ARCO Tower 15F  
1-8-1, Shimo-Meguro, Meguro-ku,  
Tokyo 153-0064  
Japan  
0120 191014 or +81 3 5437 9125  
[support.japan@freescale.com](mailto:support.japan@freescale.com)

### **Asia/Pacific:**

Freescale Semiconductor China Ltd.  
Exchange Building 23F  
No. 118 Jianguo Road  
Chaoyang District  
Beijing 100022  
China  
+86 10 5879 8000  
[support.asia@freescale.com](mailto:support.asia@freescale.com)

### **For Literature Requests Only:**

Freescale Semiconductor Literature Distribution Center  
1-800-441-2447 or +1-303-675-2140  
Fax: +1-303-675-2150  
[LDCForFreescaleSemiconductor@hibbertgroup.com](mailto:LDCForFreescaleSemiconductor@hibbertgroup.com)

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners.

© Freescale Semiconductor, Inc. 1997, 2009. All rights reserved.

