

# An Evaluation System Interfacing the MPX2000 Series Pressure Sensors to a Microprocessor

by: Bill Lucas  
Discrete Applications Engineering

## INTRODUCTION

Outputs from compensated and calibrated semiconductor pressure sensors such as the MPX2000 series devices are easily amplified and interfaced to a microprocessor. Design considerations and the description of an evaluation board using a simple analog interface connected to a microprocessor is presented here.

## PURPOSE

The evaluation system shown in [Figure 1](#) shows the ease of operating and interfacing the Freescale Semiconductor, Inc. MPX2000 series pressure sensors to a quad operational amplifier, which amplifies the sensor's output to an acceptable level for an analog-to-digital converter. The output of the op amp is connected to the A/D converter of the microprocessor and that analog value is then converted to engineering units and displayed on a liquid crystal display (LCD). This system may be used to evaluate any of the MPX2000 series pressure sensors for your specific application.

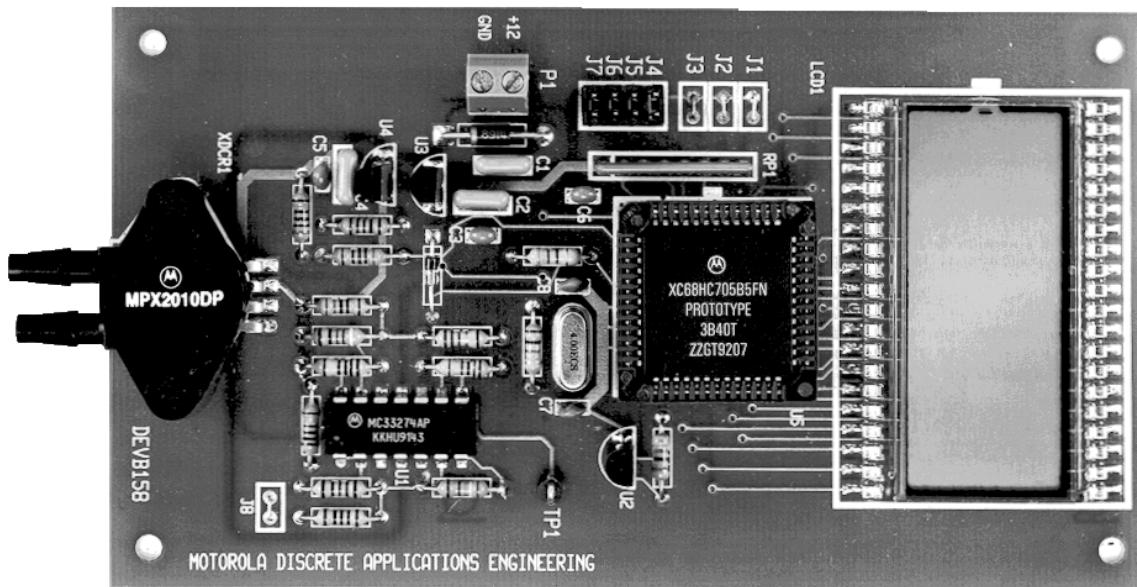


Figure 1. DEV158 2000 Series LCD Pressure Gauge EVB  
(Board No Longer Available)

## DESCRIPTION

The DEVB158 evaluation system is constructed on a small printed circuit board. Designed to be powered from a 12 Vdc power supply, the system will display the pressure applied to the MPX2000 series sensor in pounds per square inch (PSI) on the liquid crystal display. [Table 1](#) shows the pressure sensors that may be used with the system and the pressure range associated with that particular sensor as well as the jumper configuration required to support that sensor. These jumpers are installed at assembly time to correspond with the supplied sensor. Should the user chose to evaluate a different sensor other than that supplied with the board, the jumpers must be changed to correspond to [Table 1](#) for the new sensor. The displayed pressure is scaled to the full scale (PSI) range of the installed pressure sensor. No potentiometers are used in the system to adjust its span and offset. This function is performed by software.

**Table 1. Missing Table Head**

Sensor Type	Input Pressure PSI	Jumpers			
		J8	J3	J2	J1
MPX2010	0-1.5	IN	IN	IN	IN
MPX2050	0-7.5	OUT	IN	IN	OUT
MPX2100	0-15.0	OUT	IN	OUT	IN
MPX2200	0-30	OUT	IN	OUT	OUT

The signal conditioned sensor's zero pressure offset voltage with no pressure applied to the sensor is empirically computed each time power is applied to the system and stored in RAM. The sensitivity of the MPX2000 series pressure sensors is quite repeatable from unit to unit. There is a facility for a small adjustment of the slope constant built into the program. It is accomplished via jumpers J4 through J7, and will be explained in the OPERATION section.


[Figure 2](#) shows the printed circuit silkscreen and [Figure 3](#) and [Figure 4](#) show the schematic for the system.

The analog section of the system can be broken down into two subsections. These sections are the power supply and the amplification section. The power supply section consists of a diode, used to protect the system from input voltage reversal, and two fixed voltage regulators. The 5 volt regulator (U3) is used to power the microprocessor and display. The 8 volt regulator (U4) is used to power the pressure sensor, voltage references and a voltage offset source.


The microprocessor section (U5) requires minimal support hardware to function. The MC34064P-5 (U2) provides an under voltage sense function and is used to reset the microprocessor at system power-up. The 4.0 MHz crystal (Y1) provides the external portion of the oscillator function for clocking the microprocessor and providing a stable base for timing functions.


The analog section of the system can be broken down into two subsections. These sections are the power supply and the amplification section. The power supply section consists of a diode, used to protect the system from input voltage reversal, and two fixed voltage regulators. The 5 volt regulator (U3) is used to power the microprocessor and display. The 8 volt regulator (U4) is used to power the pressure sensor, voltage references and a voltage offset source.

The microprocessor section (U5) requires minimal support hardware to function. The MC34064P-5 (U2) provides an under voltage sense function and is used to reset the microprocessor at system power-up. The 4.0 MHz crystal (Y1) provides the external portion of the oscillator function for clocking the microprocessor and providing a stable base for timing functions.

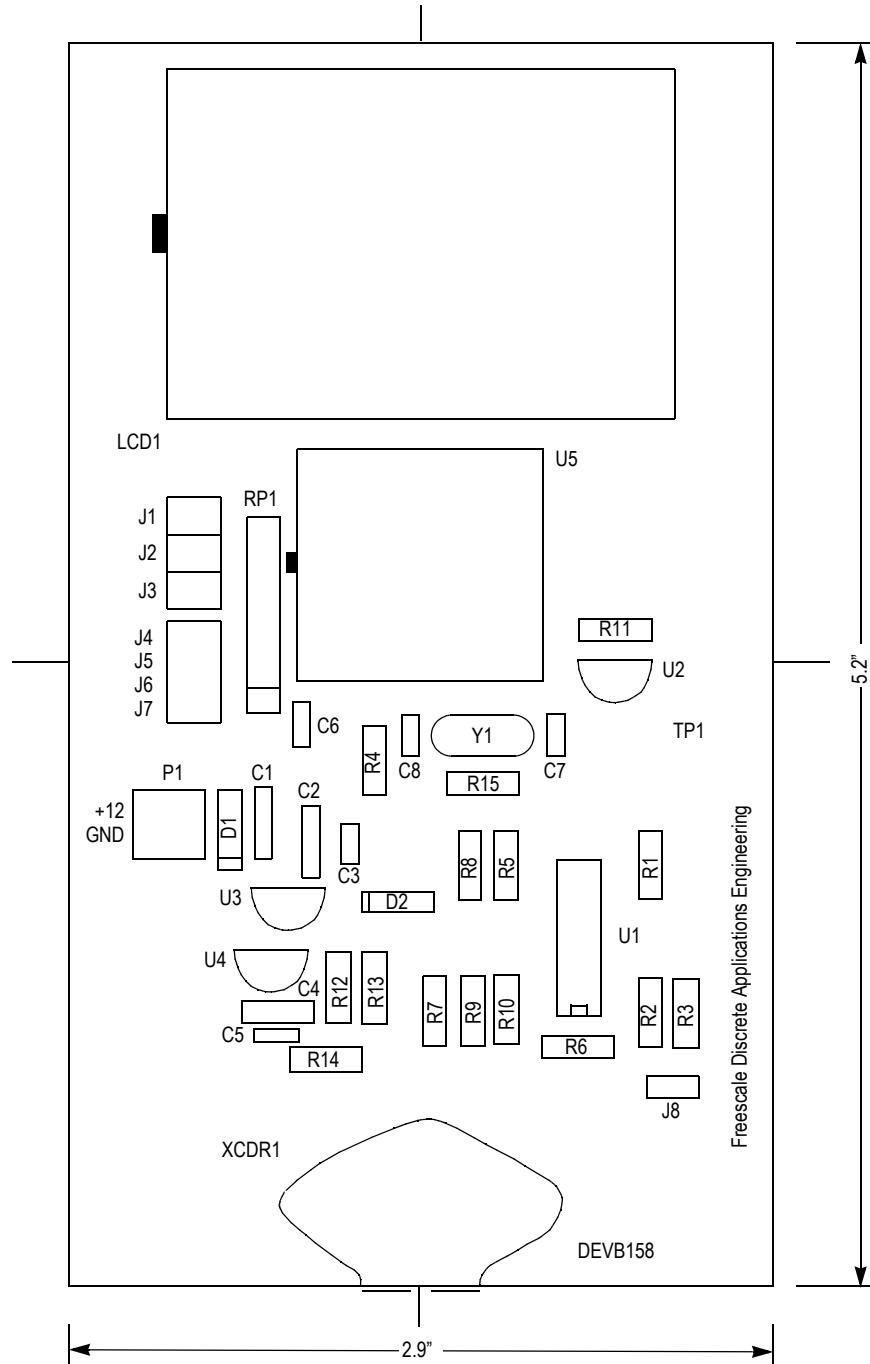

**Figure 2. Printed Circuit Silkscreen**

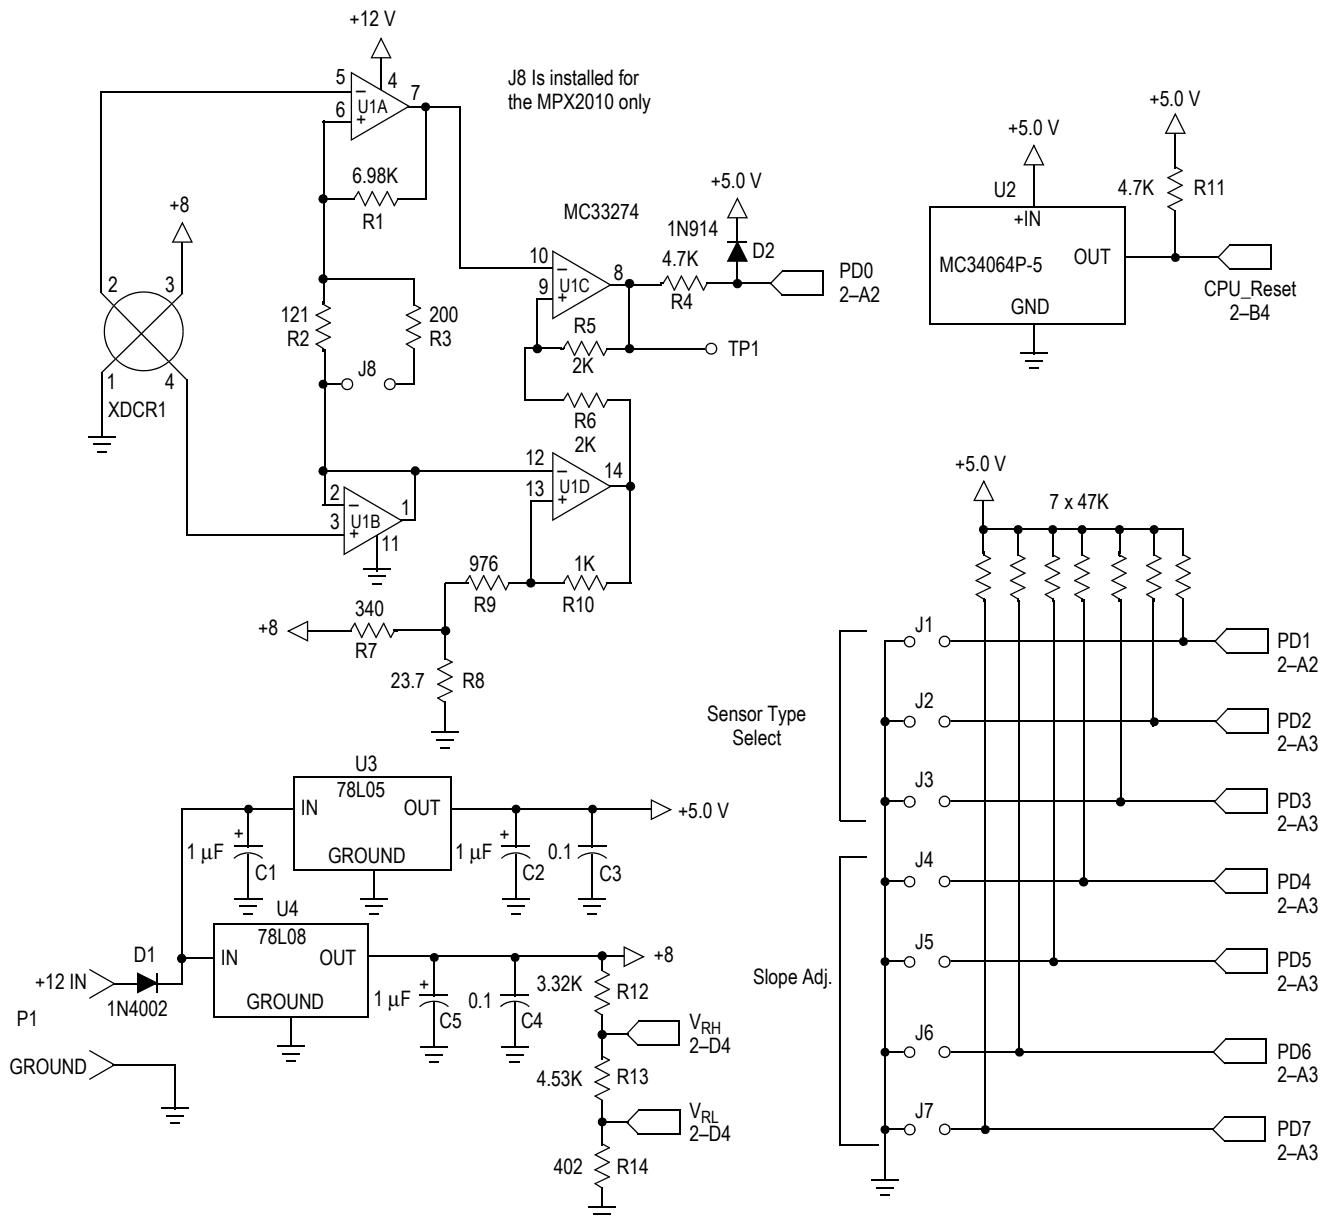

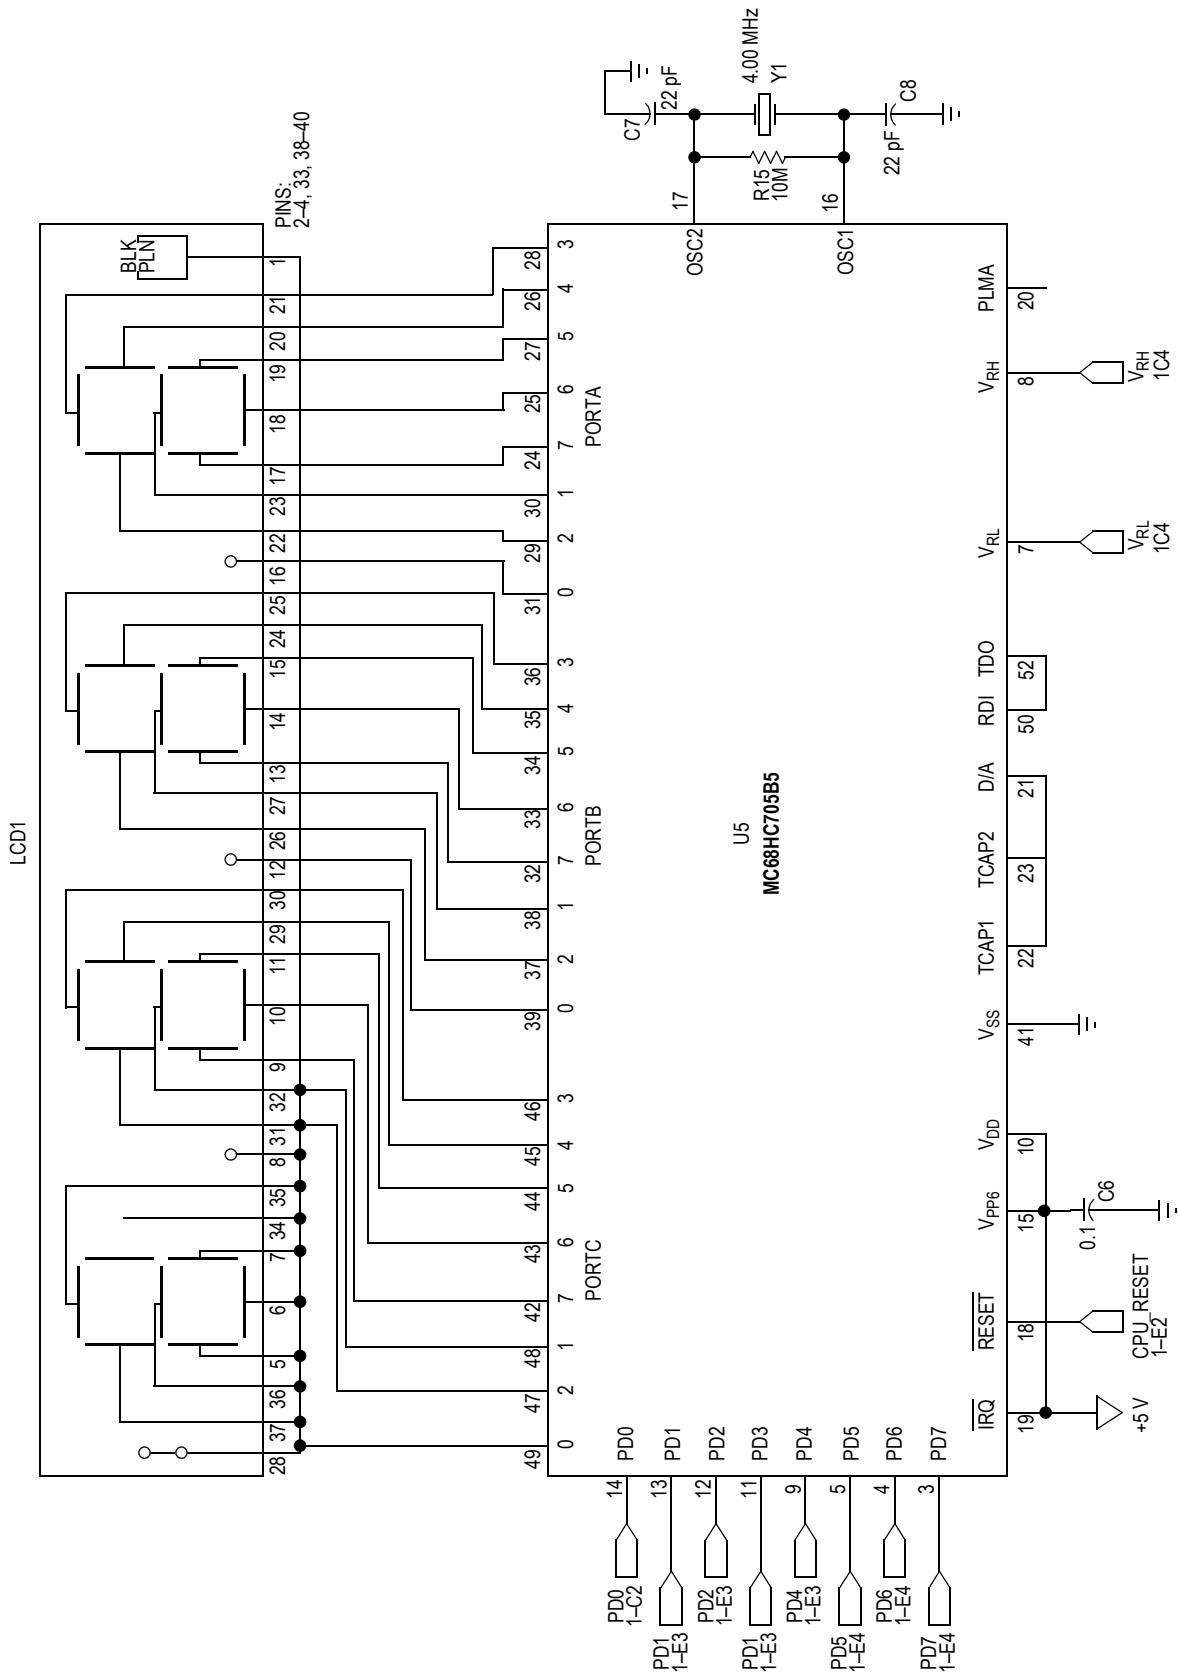

**Figure 4. Schematic B**

**AN1315**

**Table 2. Parts List**

Designators	Quant.	Description	Rating	Manufacturer	Part Number
C3, C4, C6	3	0.1 µF Ceramic Cap.	50 Vdc	Sprague	1C105Z5U104M050B
C1, C2, C5	3	1 µF Ceramic Cap.	50 Vdc	muRATA ERIE	RPE123Z5U105M050V
C7, C8	2	22 pF Ceramic Cap.	100 Vdc	Mepco/Centralab	CN15A220K
J1-J3, J8	3 OR 4	#22 or #24 AWG Tinned Copper		As Required	
J4-J7	1	Dual Row Straight 4 Pos. Arranged On 0.1" Grid		AMP	87227-2
LCD1	1	Liquid Crystal Display		IEE	LCD5657
P1	1	Power Connector		Phoenix Contact	MKDS 1/2-3.81
R1	1	6.98K Ohm resistor 1%			
R2	1	121 Ohm Resistor 1%			
R3	1	200 Ohm Resistor 1%			
R4, R11	2	4.7K Ohm Resistor			
R7	1	340 Ohm Resistor 1%			
R5, R6	2	2.0K Ohm Resistor 1%			
R8	1	23.7 Ohm Resistor 1%			
R9	1	976 Ohm Resistor 1%			
R10	1	1K Ohm Resistor 1%			
R12	1	3.32K Ohm Resistor 1%			
R13	1	4.53K Ohm Resistor 1%			
R14	1	402 Ohm Resistor 1%			
R15	1	10 Meg Ohm Resistor			
RP1	1	47K Ohm x 7 SIP Resistor 2%		CTS	770 Series
TP1	1	Test Point	Red	Components Corp.	TP-104-01-02
U1	1	Quad Operational Amplifier		Freescale	MC33274P
U2	1	Under Voltage Detector		Freescale	MC34064P-5
U3	1	5 Volt Fixed Voltage Regulator		Freescale	MC78L05ACP
U4	1	8 Volt Fixed Voltage Regulator		Freescale	MC78L08ACP
U5	1	Microprocessor		Freescale Freescale	MC68HC705B5FN or XC68HC705B5FN
XDCR	1	Pressure Sensor		Freescale	MPX2xxxDP
Y1	1	Crystal (Low Profile)	4.0 MHz	CTS	ATS040SLV
No Designator	1	52 Pin PLCC Socket for U5		AMP	821-575-1
No Designator	4	Jumpers For J4 thru J7		Molex	15-29-1025
No Designator	1	Bare Printed Circuit Board			
No Designator	4	Self Sticking Feet		Fastex	5033-01-00-5001

Notes: All resistors are 1/4 W resistors with a tolerance of 5% unless otherwise noted.

All capacitors are 100 volt, ceramic capacitors with a tolerance of 10% unless otherwise noted.

## OPERATIONAL CHARACTERISTICS

The following operational characteristics are included as a guide to operation.

Characteristic	Symbol	Min	Max	Unit
Power Supply Voltage	+12	10.75	16	Volts
Operating Current	I <sub>CC</sub>		75	mA
Full Scale Pressure MPX2010 MPX2050 MPX2100 MPX2200	P <sub>fs</sub>		1.5 7.5 15 30	PSI

### Pin-by-Pin Description

#### +12

Input power is supplied at the +12 terminal. The minimum operating voltage is 10.75 Vdc and the maximum operating voltage is 16 Vdc.

#### GND

The ground terminal is the power supply return for the system.

#### TP1

Test point 1 is connected to the final op amp stage. It is the voltage that is applied to the microprocessor's A/D converter.

There are two ports on the pressure sensor located at the bottom center of the printed circuit board. The pressure port is on the top left and the vacuum port is on the bottom right of the sensor.

## OPERATION

Connect the system to a 12 Vdc regulated power supply. (Note the polarity marked on the power terminal P1.) Depending on the particular pressure sensor being used with the system, wire jumpers J1 through J3 and J8 must be installed at board assembly time. If at some later time it is desirable to change the type of sensor that is installed on the board, jumpers J1 through J3 and J8, must be reconfigured for the system to function properly (see [Table 1](#)). If an invalid J1 through J3 jumper combination (i.e., not listed in [Table 1](#)) is used the LCD will display "SE" to indicate that condition. These jumpers are read by the software and are used to determine which sensor is installed on the board. Wire jumper J8 is installed only when an MPX2010DP pressure sensor is used on the system. The purpose of wire jumper J8 will be explained later in the text. Jumpers J4 through J7 are read by

the software to allow the user to adjust the slope constant used for the engineering units calculation (see [Table 3](#)). The pressure and vacuum ports on the sensor must be left open to atmosphere anytime the board is powered-up. This is because the zero pressure offset voltage is computed at power-up.

When you apply power to the system, the LCD will display CAL for approximately 5 seconds. After that time, pressure or vacuum may be applied to the sensor. The system will then start displaying the applied pressure in PSI.

**Table 3. Slope Constants**


J7	J6	J5	J4	Action
IN	IN	IN	IN	Normal Slope
IN	IN	IN	OUT	Decrease the Slope Approximately 7%
IN	IN	OUT	IN	Decrease the Slope Approximately 6%
IN	IN	OUT	OUT	Decrease the Slope Approximately 5%
IN	OUT	IN	IN	Decrease the Slope Approximately 4%
IN	OUT	IN	OUT	Decrease the Slope Approximately 3%
IN	OUT	OUT	IN	Decrease the Slope Approximately 2%
IN	OUT	OUT	OUT	Decrease the Slope Approximately 1%
OUT	IN	IN	IN	Increase the Slope Approximately 1%
OUT	IN	IN	OUT	Increase the Slope Approximately 2%
OUT	IN	OUT	IN	Increase the Slope Approximately 3%
OUT	IN	OUT	OUT	Increase the Slope Approximately 4%
OUT	OUT	IN	IN	Increase the Slope Approximately 5%
OUT	OUT	IN	OUT	Increase the Slope Approximately 6%
OUT	OUT	OUT	IN	Increase the Slope Approximately 7%
OUT	OUT	OUT	OUT	Normal Slope

To improve the accuracy of the system, you can change the constant used by the program that determines the span of the sensor and amplifier. You will need an accurate test gauge (using PSI as the reference) to measure the pressure applied to the sensor. Anytime after the display has completed the zero calculation, (after CAL is no longer displayed) apply the sensor's full scale pressure (see [Table 1](#)), to the sensor. Make sure that jumpers J4 through J7 are in the "normal" configuration (see [Table 3](#)). Referring to [Table 3](#), you can better "calibrate" the system by changing the configuration of J4 through J7. To "calibrate" the system, compare the display reading against that of the test gauge (with J4 through J7 in the "normal slope" configuration). Change the configuration of J4 through J7 according to [Table 3](#) to obtain the best results. The calibration jumpers may be changed while the system is powered up as they are read by the software before each display update.

## DESIGN CONSIDERATIONS

To build a system that will show how to interface an MPX2000 series pressure sensor to a microprocessor, there are two main challenges. The first is to take a small differential signal produced by the sensor and produce a ground referenced signal of sufficient amplitude to drive a microprocessor's A/D input. The second challenge is to understand the microprocessor's operation and to write software that makes the system function.

From a hardware point of view, the microprocessor portion of the system is straight forward. The microprocessor needs power, a clock source (crystal Y1, two capacitors and a resistor), and a reset signal to make it function. As for the A/D converter, external references are required to make it function. In this case, the power source for the sensor is divided to produce the voltage references for the A/D converter. Accurate results will be achieved since the output from the sensor and the A/D references are ratiometric to its power supply voltage.

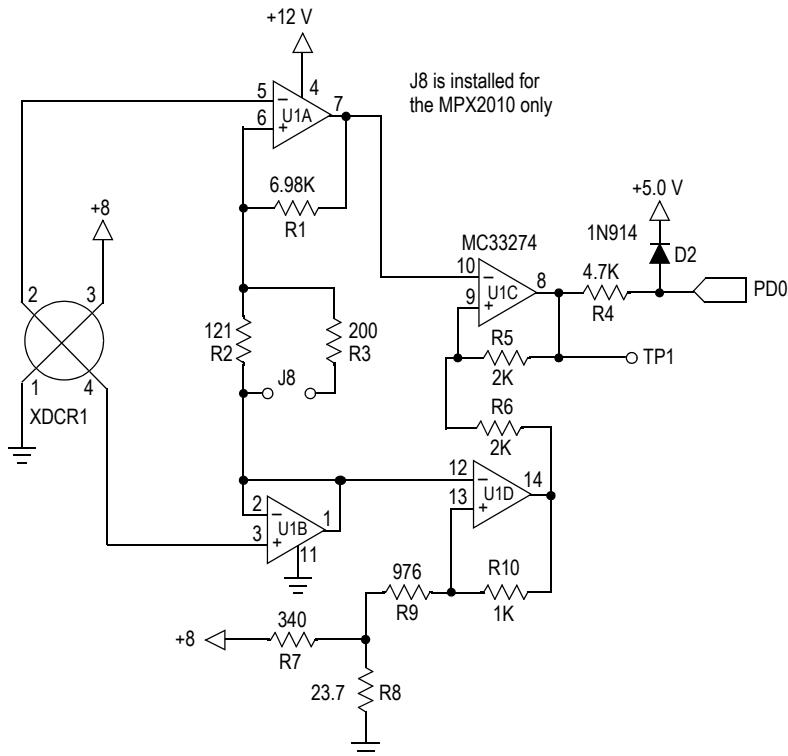

**Figure 5. Analog Interface**

The liquid crystal display is driven by Ports A, B and C of the microprocessor. There are enough I/O lines on these ports to provide drive for three full digits, the backplane and two decimal points. Software routines provide the AC waveform necessary to drive the display.


The analog portion of the system consists of the pressure sensor, a quad operational amplifier and the voltage references for the microprocessor's A/D converter and signal conditioning circuitry. [Figure 5](#) shows an interface circuit that will provide a single ended signal with sufficient amplitude to drive the microprocessor's A/D input. It uses a quad operational amplifier and several resistors to amplify and level shift the sensor's output. It is necessary to level shift the output from the final amplifier into the A/D. Using single power supplied op amps, the  $V_{CE}$  saturation of the output from an op amp cannot be guaranteed to pull down to zero volts. The analog design shown here will provide a signal to the A/D

converter with a span of approximately 4 volts when zero to full-scale pressure is applied to the sensor. The final amplifier's output is level shifted to approximately 0.7 volts. This will provide a signal that will swing between approximately 0.7 volts and 4.7 volts. The offset of 0.7 volts in this implementation does not have to be trimmed to an exact point. The software will sample the voltage applied to the A/D converter at initial power up time and call that value "zero". The important thing to remember is that the span of the signal will be approximately 4 volts when zero to full scale pressure is applied to the sensor. The 4 volt swing in signal may vary slightly from sensor to sensor and can also vary due to resistor tolerances in the analog circuitry. Jumpers J4 through J7 may be placed in various configurations to compensate for these variations (see [Table 3](#)).

Referring to [Figure 5](#), most of the amplification of the voltage from the pressure sensor is provided by U1A which is

configured as a differential amplifier. U1B serves as a unity gain buffer in order to keep any current that flows through R2 (and R3) from being fed back into the sensor's negative output. With zero pressure applied to the sensor, the differential voltage from pin 2 to pin 4 of the sensor is zero or very close to zero volts. The common mode, or the voltage measured between pins 2 or 4 to ground, is equal to approximately one

half of the voltage applied to the sensor, or 4 volts. The zero pressure output voltage at pin 7 of U1A will then be 4 volts because pin 1 of U1B is also at 4 volts, creating a zero bias between pins 5 and 6 of U1A. The four volt zero pressure output will then be level shifted to the desired zero pressure offset voltage (approximately 0.7 volts) by U1C and U1D.

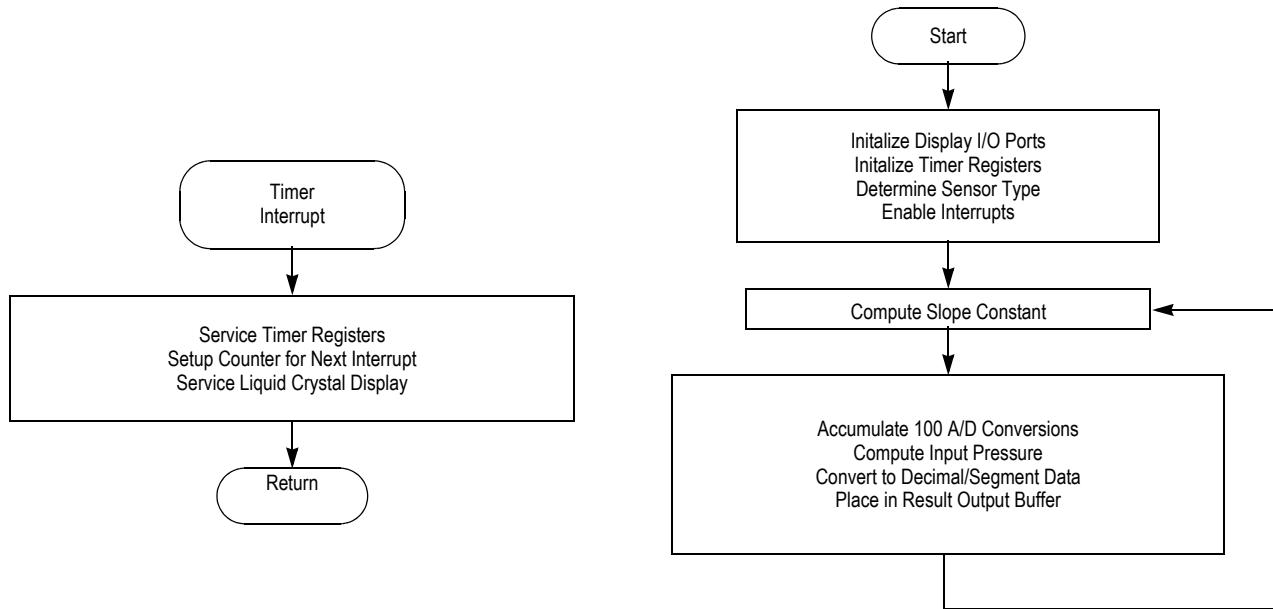

**Figure 6. DEVB-158 Software Flowchart**

To further explain the operation of the level shifting circuitry, refer again to [Figure 5](#). Assuming zero pressure is applied to the sensor and the common mode voltage from the sensor is 4 volts, the voltage applied to pin 12 of U1D will be 4 volts, implying pin 13 will be at 4 volts. The gain of amplifier U1D will be  $(R10/(R8+R9))+1$  or a gain of 2. R7 will inject a  $V_{\text{offset}}$  (0.7 volts) into amplifier U1D, thus causing the output at U1D pin 14 to be  $7.3 = (4 \text{ volts } @ \text{ U1D pin } 12 \times 2) - 0.7 \text{ volts}$ . The gain of U1C is also set at 2  $((R5/R6)+1)$ . With 4 volts applied to pin 10 of U1C, its output at U1C pin 8 will be  $0.7 = ((4 \text{ volts } @ \text{ U1C pin } 10 \times 2) - 7.3 \text{ volts})$ . For this scheme to work properly, amplifiers U1C and U1D must have a gain of 2 and the output of U1D must be shifted down by the  $V_{\text{offset}}$  provided by R7. In this system, the 0.7 volts  $V_{\text{offset}}$  was arbitrarily picked and could have been any voltage greater than the  $V_{\text{sat}}$  of the op amp being used. The system software will take in account any variations of  $V_{\text{offset}}$  as it assumes no pressure is applied to the sensor at system power up.

The gain of the analog circuit is approximately 117. With the values shown in [Figure 5](#), the gain of 117 will provide a span of approximately 4 volts on U1C pin 8 when the pressure sensor and the 8 volt fixed voltage regulator are at their maximum output voltage tolerance. All of the sensors listed in [Table 1](#) with the exception of the MPX2010DP output approximately 33 mV when full scale pressure is applied.

When the MPX2010DP sensor is used, its full scale sensor differential output is approximately 20 mV. J8 must be installed to increase the gain of the analog circuit to still provide the 4 volts span out of U1C pin 8 with a 20 mV differential from the sensor.

Diode D2 is used to protect the microprocessor's A/D input if the output from U1C exceeds 5.6 volts. R4 is used to provide current limiting into D4 under failure or overvoltage conditions.

## SOFTWARE

The source code, compiled listing, and S-record output for the software used in this system are available on the Freescale Freeware Bulletin Board Service in the MCU directory under the filename DEVB158.ARC. To access the bulletin board, you must have a telephone line, a 300, 1200 or 2400 baud modem and a personal computer. The modem must be compatible with the Bell 212A standard. Call (512) 891-3733 to access the Bulletin Board Service.

[Figure 6](#) is a flowchart for the program that controls the system. The software for the system consists of a number of modules. Their functions provide the capability for system calibration as well as displaying the pressure input to the MPX2000 series pressure sensor.

The "C" compiler used in this project was provided by BYTE CRAFT LTD. (519) 888-6911. A compiler listing of the program is included at the end of this document. The following is a brief explanation of the routines:

- delay()** Used to provide a software loop delay.
- read\_a2d()** Performs 100 reads on the A/D converter on multiplexer channel 0 and returns the accumulation.
- fixcompare()** Services the internal timer for 15 ms. timer compare interrupts.
- TIMERCMP()** Alternates the data and backplane inputs to the liquid crystal display.
- initio()** Sets up the microprocessor's I/O ports, timer and enables processor interrupts.
- adzero()** This routine is called at powerup time. It delays to let the power supply and the transducer stabilize. It then calls "read\_atod()" and saves the returned value as the sensors output voltage with zero pressure applied.
- cvt\_bin\_dec(unsigned long arg)** This routine converts the unsigned binary argument passed in "arg" to a five digit

decimal number in an array called "digit." It then uses the decimal results for each digit as an index into a table that converts the decimal number into a segment pattern for the display. This is then output to the display.

**display\_psi()** This routine is called from "main()" never to return. The A/D converter routine is called, the pressure is calculated based on the type sensor detected and the pressure applied to the sensor is displayed. The loop then repeats.

**sensor\_type()** This routine determines the type of sensor from reading J1 to J3, setting the full scale pressure for that particular sensor in a variable for use by display\_psi().

**sensor\_slope()** This routine determines the slope constant to be used by display\_psi() for engineering units output.

**main()** This is the main routine called from reset. It calls "initio()" to setup the system's I/O. "display\_psi()" is called to compute and display the pressure applied to the sensor.

```
#pragma option f0;
/*
```

THE FOLLOWING 'C' SOURCE CODE IS WRITTEN FOR THE DEVB158 EVALUATION  
BOARD. IT WAS COMPILED WITH A COMPILER COURTESY OF:

BYTE CRAFT LTD.  
421 KING ST.  
WATERLOO, ONTARIO  
CANADA N2J 4E4  
(519)888-6911

SOME SOURCE CODE CHANGES MAY BE NECESSARY FOR COMPIRATION WITH OTHER  
COMPILERS.

BILL LUCAS 2/5/92  
Freescale, SPS

Revision history  
rev. 1.0 initial release 3/19/92  
rev. 1.1 added additional decimal digit to the MPX2010 sensor. Originally  
resolved the output to .1 PSI. Modified cvt\_bin\_dec to output PSI resolved  
to .01 PSI. WLL 9/25/92

```
/*
0800 1700
0050 0096

/*
1FFE
1FFC
1FFA
1FF8
1FF6
1FF4
1FF2

/*
0000
0001
0002
0003
0004
0005
0006
0007
0008
0009
000A
000B
000C
000D
000E
000F
0010
0011
0012
0013
0014
0015
0016
0017
0018
0019
001A
001B
001C
001D

/*
0x00; /* 
0x01; /* 
0x02; /* 
0x03; /* in ,-,SS ,SCK ,MOSI ,MISO,TxD,RxD */
0x04; /* Data direction, Port A */
0x05; /* Data direction, Port B */
0x06; /* Data direction, Port C (all output) */
0x07; /* eeprom/eclk cntl */
0x08; /* a/d data register */
0x09; /* a/d stat/control */
0x0a; /* pulse length modulation a */
0x0b; /* pulse length modulation b */
0x0c; /* miscellaneous register */
0x0d; /* sci baud rate register */
0x0e; /* sci control 1 */
0x0f; /* sci control 2 */
0x10; /* sci status reg */
0x11; /* SCI Data */
0x12; /* ICIE,OCIE,TOIE,O;0,0,IEGE,OLVL */
0x13; /* ICF,OCF,TOF,O; 0,0,0 */
0x14; /* Input Capture Reg (Hi-0x14, Lo-0x15) */
0x15; /* Input Capture Reg (Hi-0x14, Lo-0x15) */
0x16; /* Output Compare Reg (Hi-0x16, Lo-0x17) */
0x17; /* Output Compare Reg (Hi-0x16, Lo-0x17) */
0x18; /* Timer Count Reg (Hi-0x18, Lo-0x19) */
0x19; /* Timer Count Reg (Hi-0x18, Lo-0x19) */
0x1a; /* Alternate Count Reg (Hi-$1A, Lo-$1B) */
0x1b; /* Alternate Count Reg (Hi-$1A, Lo-$1B) */
0x1c; /* Input Capture Reg (Hi-0x1c, Lo-0x1d) */
0x1d; /* Input Capture Reg (Hi-0x1c, Lo-0x1d) */
```

```

001E          #pragma portrw ocmphi2 @ 0x1e; /* Output Compare Reg (Hi-0x1e, Lo-0x1f) */
001F          #pragma portrw ocmpllo2 @ 0x1f; /* Output Compare Reg (Hi-0x1e, Lo-0x1f) */

1FEF 74      #pragma mor @ 0x1efe = 0x74; /* this disables the watchdog counter and does
                                         not add pull-down resistors on ports B and C */

                                         /* put constants and variables here...they must be global */
                                         /***** */

0800 FC 30 DA 7A 36 6E E6 38 FE  const char lcdtab[]={0xfc,0x30,0xda,0x7a,0x36,0x6e,0xe6,0x38,0xfe,0x3e };
0809 3E      /* lcd pattern table 0 1 2 3 4 5 6 7 8 9 */

080A 27 10 03 E8 00 64 00 0A  const long dectable[] = { 10000, 1000, 100, 10 };

0050 0005      unsigned int digit[5]; /* buffer to hold results from cvt_bin_dec function */

0812 00 96 00 4B 00 96 00 1E 00  const long type[] = { 150, 75, 150, 30, 103 };

081B 67      /*
                                         MPX2010 MPX2050 MPX2100 MPX2200 MPX2700
                                         The table above will cause the final results of the pressure to
                                         engineering units to display the 1.5, 7.3 and 15.0 devices with a
                                         decimal place in the tens position. The 30 and 103 psi devices will
                                         display in integer units.
                                         */

                                         const long slope_const[]={ 450,418,423,427,432,436,441,445,454,459,
                                         463,468,472,477,481,450 };

081C 01 C2 01 A2 01 A7 01 AB 01
0825 B0 01 B4 01 B9 01 BD 01 C6
082E 01 CB 01 CF 01 D4 01 D8 01
0837 DD 01 E1 01 C2

0000          register areg; /* processor's A register */

0055          long atodtemp; /* temp to accumulate 100 a/d readings for smoothing */

0059          long slope; /* multiplier for adc to engineering units conversion */

005B          int adcnt; /* a/d converter loop counter */

005C          long xdcr_offset; /* initial xdcr offset */

005E          long sensor_model; /* installed sensor based on J1..J3 */
0060          int sensor_index; /* determine the location of the decimal pt. */

0061 0063      unsigned long i,j; /* counter for loops */

0065          unsigned int k; /* misc variable */

                                         struct bothbytes
                                         {
                                             int hi;
                                             int lo;
                                         };

                                         union isboth
                                         {
                                             long l;
                                             struct bothbytes b;
                                         };

0066 0002      union isboth q; /* used for timer set-up */

                                         /***** */

                                         /* variables for add32 */
0068 0004      unsigned long SUM[2]; /* result */
006C 0004      unsigned long ADDEND[2]; /* one input */
0070 0004      unsigned long AUGEND[2]; /* second input */

                                         /* variables for sub32 */
0074 0004      unsigned long MINUE[2]; /* minuend */
0078 0004      unsigned long SUBTRA[2]; /* subtrahend */

```

```

007C 0004           unsigned long DIFF[2]; /* difference */

0080 0004           /* variables for mul32 */
0084 0004           unsigned long MULTP[2]; /* multiplier */
0088 0004           unsigned long MTEMP[2]; /* high order 4 bytes at return */
0088 0004           unsigned long MULCAN[2]; /* multiplicand at input, low 4 bytes at return */

008C 0004           /* variables for div32 */
0090 0004           unsigned long DVDND[2]; /* Dividend */
0094 0004           unsigned long DVSOR[2]; /* Divisor */
0098 0004           unsigned long QUO[2]; /* Quotient */
0098 0004           unsigned int CNT; /* Loop counter */

/* The code starts here */

/********************************************/

void add32()
{
    #asm

-----*
* Add two 32-bit values.
*   Inputs:
*       ADDEND: ADDEND[0..3] HIGH ORDER BYTE IS ADDEND+0
*       AUGEND: AUGEND[0..3] HIGH ORDER BYTE IS AUGEND+0
*   Output:
*       SUM: SUM[0..3] HIGH ORDER BYTE IS SUM+0
*-----*
*-----*
083C B6 6F          LDA ADDEND+3    low byte
083E BB 73          ADD AUGEND+3
0840 B7 6B          STA SUM+3
0842 B6 6E          LDA ADDEND+2    medium low byte
0844 B9 72          ADC AUGEND+2
0846 B7 6A          STA SUM+2
0848 B6 6D          LDA ADDEND+1    medium high byte
084A B9 71          ADC AUGEND+1
084C B7 69          STA SUM+1
084E B6 6C          LDA ADDEND    high byte
0850 B9 70          ADC AUGEND
0852 B7 68          STA SUM
0854 81             RTS      done
*-----*
*-----*
#endasm
0855 81             RTS
}

void sub32()
{
    #asm

-----*
* Subtract two 32-bit values.
*   Input:
*       Minuend: MINUE[0..3]
*       Subtrahend: SUBTRA[0..3]
*   Output:
*       Difference: DIFF[1..0]
*-----*
*-----*
0856 B6 77          LDA MINUE+3    low byte
0858 B0 7             SUB SUBTRA+3
085A B7 7F          STA DIFF+3
085C B6 76          LDA MINUE+2    medium low byte
085E B2 7A          SBC SUBTRA+2
0860 B7 7E          STA DIFF+2
0862 B6 75          LDA MINUE+1    medium high byte
0864 B2 79          SBC SUBTRA+1
0866 B7 7D          STA DIFF+1
0868 B6 74          LDA MINUE    high byte
086A B2 78          SBC SUBTRA
086C B7 7C          STA DIFF
086E 81             RTS      done
*-----*

```

```

        #endasm
086F 81      RTS      }

        void mul32()
{
    #asm
*-----*
* Multiply 32-bit value by a 32-bit value
*
*
*   Input:
*       Multiplier:    MULTP[0..3]
*       Multiplicand:  MULCAN[0..3]
*   Output:
*       Product:      MTEMP[0..3] AND MULCAN[0..3] MTEMP[0] IS THE HIGH
*                           ORDER BYTE AND MULCAN[3] IS THE LOW ORDER BYTE
*
*   THIS ROUTINE DOES NOT USE THE MUL INSTRUCTION FOR THE SAKE OF USERS NOT
*   USING THE HC(7)05 SERIES PROCESSORS.
*-----*
*
0870 AE 20      LDX  #32      loop counter
0872 3F 84      CLR  MTEMP      clean-up for result
0874 3F 85      CLR  MTEMP+1   *
0876 3F 86      CLR  MTEMP+2   *
0878 3F 87      CLR  MTEMP+3   *
087A 36 88      ROR  MULCAN   low but to carry, the rest one to the right
087C 36 89      ROR  MULCAN+1 *
087E 36 8A      ROR  MULCAN+2 *
0880 36 8B      ROR  MULCAN+3 *
0882 24 18      MNEXT     BCC  ROTATE  if carry is set, do the add
0884 B6 87      LDA  MTEMP+3   *
0886 BB 83      ADD  MULTP+3   *
0888 B7 87      STA  MTEMP+3   *
088A B6 86      LDA  MTEMP+2   *
088C B9 82      ADC  MULTP+2   *
088E B7 86      STA  MTEMP+2   *
0890 B6 85      LDA  MTEMP+1   *
0892 B9 81      ADC  MULTP+1   *
0894 B7 85      STA  MTEMP+1   *
0896 B6 84      LDA  MTEMP   *
0898 B9 80      ADC  MULTP   *
089A B7 84      STA  MTEMP   *
089C 36 84      ROTATE    ROR  MTEMP   else: shift low bit to carry, the rest to the right
089E 36 85      ROR  MTEMP+1   *
08A0 36 86      ROR  MTEMP+2   *
08A2 36 87      ROR  MTEMP+3   *
08A4 36 88      ROR  MULCAN   *
08A6 36 89      ROR  MULCAN+1 *
08A8 36 8A      ROR  MULCAN+2 *
08AA 36 8B      ROR  MULCAN+3 *
08AC 5A          DEX   bump the counter down
08AD 26 D3      BNE  MNEXT    done yet ?
08AF 81          RTS   done

        #endasm
08B0 81      RTS      }

        void div32()
{
    #asm
*
*-----*
* Divide 32 bit by 32 bit unsigned integer routine
*
*
*   Input:
*       Dividend:  DVNDN [+0..+3] HIGH ORDER BYTE IS DVND+0
*       Divisor:   DVSDR [+0..+3] HIGH ORDER BYTE IS DVSDR+0
*   Output:
*       Quotient: QUO [+0..+3] HIGH ORDER BYTE IS QUO+0
*-----*
*
```

```

08B1 3F 94      CLR  QUOzero result registers
08B3 3F 95      CLR  QUO+1    *
08B5 3F 96      CLR  QUO+2    *
08B7 3F 97      CLR  QUO+3    *
08B9 A6 01      LDA  #1      initial loop count
08BB 3D 90      TST  DVSOR   if the high order bit is set..no need to shift DVSOR
08BD 2B 0F      BMI  DIV153

*
08BF 4C          DIV151  INCA      bump the loop counter
08C0 38 93      ASL  DVSOR+3  now shift the divisor until the high order bit = 1
08C2 39 92      ROL  DVSOR+2
08C4 39 91      ROL  DVSOR+1  *
08C6 39 90      ROL  DVSOR    *
08C8 2B 04      BMI  DIV153  done if high order bit = 1
08CA A1 21      CMP  #33     have we shifted all possible bits in the DVSOR yet ?
08CC 26 F1      BNE  DIV151  no

*
08CE B7 9       DIV153  STA  CNT    save the loop counter so we can do the divide
08D0 B6 8F      DIV163  LDA  DVDND+3  sub 32 bit divisor from dividend
08D2 B0 93      SUB  DVSOR+3  *
08D4 B7 8F      STA  DVDND+3  *
08D6 B6 8E      LDA  DVDND+2  *
08D8 B2 92      SBC  DVSOR+2  *
08DA B7 8E      STA  DVDND+2  *
08DC B6 8D      LDA  DVDND+1  *
08DE B2 91      SBC  DVSOR+1  *
08E0 B7 8D      STA  DVDND+1  *
08E2 B6 8C      LDA  DVDND    *
08E4 B2 90      SBC  DVSOR    *
08E6 B7 8C      STA  DVDND    *
08E8 24 1B      BCC  DIV165  carry is clear if DVSOR was larger than DVDND
08EA B6 8F      LDA  DVDND+3  add the divisor back...was larger than the dividend
08EC BB 93      ADD  DVSOR+3  *
08EE B7 8F      STA  DVDND+3  *
08F0 B6 8E      LDA  DVDND+2  *
08F2 B9 92      ADC  DVSOR+2  *
08F4 B7 8E      STA  DVDND+2  *
08F6 B6 8D      LDA  DVDND+1  *
08F8 B9 91      ADC  DVSOR+1  *
08FA B7 8D      STA  DVDND+1  *
08FC B6 8C      LDA  DVDND    *
08FE B9 90      ADC  DVSOR    *
0900 B7 8C      STA  DVDND    *
0902 98          CLC           this will clear the respective bit in QUO due to
                                the need to add DVSOR back to DVND
0903 20 01      BRA  DIV167
0905 99          DIV165  SEC           this will set the respective bit in QUO
0906 39 97      DIV167  ROL  QUO+3   set or clear the low order bit in QUO based on above
0908 39 96
090A 39 95
090C 39 94
090E 34 90      LSR  DVSOR   divide the divisor by 2
0910 36 91      ROR  DVSOR+1
0912 36 92      ROR  DVSOR+2
0914 36 93      ROR  DVSOR+3
0916 3A 98      DEC  CNT    bump the loop counter down
0918 26 B6      BNE  DIV163  finished yet ?
091A 81          RTSyes

*
#endasm
091B 81          RTS

/*****
/* These interrupts are not used...give them a graceful return if for
some reason one occurs */

1FFC 09 1C      __SWI(){}
091C 80          RTI
1FFA 09 1D      IRQ(){}

```

```

091D 80      RTI
1FF8 09 1E    RTI
091E 80      RTI
1FF4 09 1F    RTI
091F 80      RTI
1FF2 09 20    RTI
0920 80      RTI

                                         ****
                                         void sensor_type()
                                         {
                                         k = portd & 0x0e; /* we only care about bits 1..3 */
0921 B6 03      LDA   $03
0923 A4 0E      AND   #$0E
0925 B7 65      STA   $65
0927 34 65      LSR   $65
0929 B6 65      LDA   $65
092B A1 04      CMP   #$04
092D 23 0C      BLS   $093B
                                         { /* we have a set-up error in wire jumpers J1 - J3 */
092F 3F 02      CLR   $02
0931 A6 6E      LDA   #$6E
0933 B7 01      STA   $01
0935 A6 CE      LDA   #$CE
0937 B7 00      STA   $00
0939 20 FE      BRA   $0939
                                         while(1);
                                         }
093B B6 65      LDA   $65
093D B7 60      STA   $60
093F 97      TAX
0940 58      LSLX
0941 D6 08 12    LDA   $0812,X
0944 B7 5E      STA   $5E
0946 D6 08 13    LDA   $0813,X
0949 B7 5F      STA   $5F
094B 81      RTS
                                         }

                                         ****
                                         void sensor_slope()
                                         {
                                         k=portd & 0xf0; /* we only care about bits 4..7 */
094C B6 03      LDA   $03
094E A4 F0      AND   #$F0
0950 B7 65      STA   $65
0952 34 65      LSR   $65
0954 34 65      LSR   $65
0956 34 65      LSR   $65
0958 34 65      LSR   $65
095A BE 65      LDX   $65
095C 58      LSLX
095D D6 08 1C    LDA   $081C,X
0960 B7 59      STA   $59
0962 D6 08 1D    LDA   $081D,X
0965 B7 5A      STA   $5A
0967 81      RTS
                                         }

                                         ****
                                         void delay(void) /* just hang around for a while */
                                         {
                                         for (i=0; i<20000; ++i);
0968 3F 62      CLR   $62
096A 3F 61      CLR   $61
096C B6 62      LDA   $62
096E A0 20      SUB   #$20
0970 B6 61      LDA   $61
0972 A2 4E      SBC   #$4E
0974 24 08      BCC   $097E
0976 3C 62      INC   $62
0978 26 0       BNE   $097C
097A 3C 61      IN    $61
097C 20 EE      BRA   $096C
097E 81      RTS
                                         }

```

```

*****read_a2d(void)
{
/* read the a/d converter on channel 5 and accumulate the result
in atodtemp */

097F 3F 56 CLR $56
0981 3F 55 CLR $55
0983 3F 5B CLR $5B
0985 B6 5B LDA $5B
0987 A8 80 EOR #$80
0989 A1 E4 CMP #$E4
098B 24 21 BCC $09AE

098D A6 20 LDA #$20
098F B7 09 STA $09
0991 0F 09 FD BRCLR 7,$09,$0991
0994 B6 08 LDA $08
0996 3F 57 CLR $57
0998 B7 58 STA $58
099A BB 56 ADD $56
099C B7 58 STA $58
099E B6 57 LDA $57
09A0 B9 55 ADC $55
09A2 B7 57 STA $57
09A4 B7 55 STA $55
09A6 B6 58 LDA $58
09A8 B7 56 STA $56
}

09AA 3C 5B INC $5B
09AC 20 D7 BRA $0985
09AE B6 56 LDA $56
09B0 B7 58 STA $58
09B2 B6 55 LDA $55
09B4 B7 57 STA $57
09B6 3F 9A CLR $9A
09B8 A6 64 LDA #$64
09BA B7 9B STA $9B
09BC CD 0B F1 JSR $0BF1
09BF CD 0C 22 JSR $0C22
09C2 BF 55 STX $55
09C4 B7 56 STA $56
09C6 81 RTS
return atodtemp;
}

*****void fixcompare (void) /* sets-up the timer compare for the next interrupt */
{
q.b.hi =tcnhi;
q.b.lo = tcntlo;
q.l +=7500; /* ((4mhz xtal/2)/4) = counter period = 2us.*7500 = 15ms. */
ocmpphil = q.b.hi;
areg=tsr; /* dummy read */
ocmplol = q.b.lo;
}

*****void TIMERCMP (void) /* timer service module */
{
portc =~ portc; /* service the lcd by inverting the ports */
portb =~ portb;
porta =~ porta;
}

```

```

09E8 AD DD    BSR    $09C7      fixcompare();
09EA 80        RTI

                                }

                                /*****



void adzero(void) /* called by initio() to save initial xdcr's zero
                     pressure offset voltage output */
{

                                for ( j=0; j<20; ++j) /* give the sensor time to "warm-up" and the
                                power supply time to settle down */

                                {

                                delay();

                                }

                                INC    $64
09FC 3C 64      BNE    $0A02
09FE 26 02      LDA    $64
0A00 3C 63      LDA    $63
0A02 20 EB      SBC    #$00
0A04 CD 09 7F    RTS
0A07 3F 5C      CLR    $5C
0A09 B7 5D      STA    $5D
0A0B 81        RTS

                                }

                                /*****



void initio (void) /* setup the I/O */
{
    adstat = 0x20; /* power-up the A/D */
    porta = portb = portc = 0;
    ddra = ddrb = ddrc = 0xff;

    areg=tsr; /* dummy read */
    ocmphil = ocmphi2 = 0;

    areg = ocmphlo2; /* clear out output compare 2 if it happens to be set */
    fixcompare(); /* set-up for the first timer interrupt */
    tcr = 0x40;

    CLI; /* let the interrupts begin ! */
    /* write CAL to the display */
    portc = 0xcc; /* C */
    portb = 0xbe; /* A */
    porta = 0xc4; /* L */

    sensor_type(); /* get the model of the sensor based on J1..J3 */
    adzero(); /* auto zero */
}

                                /*****



void cvt_bin_dec(unsigned long arg)

/* First converts the argument to a five digit decimal value. The msd is in
the lowest address. Then leading zero suppress the value and write it to the
display ports.

The argument value is 0..65535 decimal. */

009D
0A3F BF 9D      STX    $9D
0A41 B7 9E      STA    $9E
}

```

```

009F          char i;
00A0          unsigned long l;
0A43 3F 9F    CLR   $9F      for ( i=0; i < 5; ++i )
0A45 B6 9F    LDA   $9F
0A47 A1 05    CMP   #$05
0A49 24 07    BCC   $0A52
0A4B 97        {
0A4C 6F 50    TAX   $50,X   digit[i] = 0x0; /* put blanks in all digit positions */
0A4E 3C 9F    INC   $9F
0A50 20 F3    BRA   $0A45
0A52 3F 9F    CLR   $9F      for ( i=0; i < 4; ++i )
0A54 B6 9F    LDA   $9F
0A56 A1 04    CMP   #$04
0A58 24 7A    BCC   $0AD4
0A5A 97        {
0A5B 58        if ( arg >= dectable [i] )
0A5C D6 08 0B  LDA   $080B,X
0A5F B0 9E    SUB   $9E
0A61 B7 58    STA   $58
0A63 B6 9D    LDA   $9D
0A65 A8 80    EOR   #$80
0A67 B7 57    STA   $57
0A69 D6 08 0A  LDA   $080A,X
0A6C A8 80    EOR   #$80
0A6E B2 57    SBC   $57

0A70 BA 58    ORA   $58
0A72 22 5C    BHI   $0ADO
0A74 BE 9F    LDX   $9F      {
0A76 58        LSLX
0A77 D6 08 0A  LDA   $080A,X
0A7A B7 A0    STA   $A0
0A7C D6 08 0B  LDA   $080B,X
0A7F B7 A1    STA   $A1
0A81 B6 9E    LDA   $9E      l = dectable[i];
0A83 B7 58    STA   $58
0A85 B6 9D    LDA   $9D
0A87 B7 57    STA   $57
0A89 B6 A0    LDA   $A0
0A8B B7 9A    STA   $9A
0A8D B6 A1    LDA   $A1
0A8F B7 9B    STA   $9B
0A91 CD 0B F1  JSR   $0BF1
0A94 CD 0C 22  JSR   $0C22
0A97 BF 57    STX   $57
0A99 B7 58    STA   $58
0A9B BE 9F    LDX   $9F
0A9D E7 50    STA   $50,X
0A9F BE 9F    LDX   $9F      digit[i] = arg / l;
0AA1 E6 50    LDA   $50,X
0AA3 3F 57    CLR   $57
0AA5 B7 58    STA   $58
0AA7 B6 A0    LDA   $A0
0AA9 B7 9A    STA   $9A
0AAB B6 A1    LDA   $A1
0AAD B7 9B    STA   $9B
0AAF CD 0B D2  JSR   $0BD2
0AB2 BF 57    STX   $57
0AB4 B7 58    STA   $58
0AB6 33 57    COM   $57
0AB8 30 58    NEG   $58
0ABA 26 02    BNE   $0ABE
0ABC 3C 57    INC   $57
0ABE B6 58    LDA   $58
0AC0 BB 9E    ADD   $9E
0AC2 B7 58    STA   $58
0AC4 B6 57    LDA   $57
0AC6 B9 9D    ADC   $9D
0AC8 B7 57    STA   $57
0ACA B7 9D    STA   $9D

```

```

OACC B6 58    LDA    $58
OACE B7 9E    STA    $9E
                    }
                }

OADO 3C 9F    INC    $9F
OAD2 20 80    BRA    $0A54
OAD4 B6 9E    LDA    $9E      digit[i] = arg;
OAD6 B7 58    STA    $58
OAD8 B6 9D    LDA    $9D
OADA B7 57    STA    $57
OADC BE 9F    LDX    $9F
OADE B6 58    LDA    $58
OAE0 E7 50    STA    $50,X

                                /* now zero suppress and send the lcd pattern to the display */
OAE2 9B    SEI
OAE3 3D 52   TST    $52      SEI;
OAE5 26 04   BNE    $0AEB   if ( digit[2] == 0 ) /* leading zero suppression */
OAE7 3F 02   CLR    $02      portc = 0;
OAE9 20 07   BRA    $0AF2   else
OAE9 BE 52   LDX    $52      portc = ( lcdtab[digit[2]] ); /* 100's digit */
OAE9 D6 08 00 LDA    $0800,X
OAF0 B7 02   STA    $02
OAF2 3D 52   TST    $52      if ( digit[2] == 0 && digit[3] == 0 )
OAF4 26 08   BNE    $0AFE
OAF6 3D 53   TST    $53
OAF8 26 04   BNE    $0AFE
OAF9 3F 01   CLR    $01      portb=0;
OAFB 20 07   BRA    $0B05   else
OAFB BE 53   LDX    $53      portb = ( lcdtab[digit[3]] ); /* 10's digit */
OB00 D6 08 00 LDA    $0800,X

OB03 B7 01   STA    $01
OB05 BE 54   LDX    $54      porta = ( lcdtab[digit[4]] ); /* 1's digit */
OB07 D6 08 00 LDA    $0800,X
OB0A B7 00   STA    $00      /* place the decimal point only if the sensor is 15 psi or 7.5 psi */
OB0C B6 60   LDA    $60      if ( sensor_index < 3 )
OB0E A8 80   EOR    #$80
OB10 A1 83   CMP    #$83
OB12 24 08   BCC    $0B1C
OB14 BE 54   LDX    $54      porta = ( lcdtab[digit[4]]+1 ); /* add the decimal point to the lsd */
OB16 D6 08 00 LDA    $0800,X
OB19 4C     INCA
OB1A B7 00   STA    $00      if(sensor_index ==0) /* special case */
OB1C 3D 60   TST    $60
OB1E 26 0F   BNE    $0B2F
                    {
OB20 BE 54   LDX    $54      porta = ( lcdtab[digit[4]] ); /* get rid of the decimal at lsd */
OB22 D6 08 00 LDA    $0800,X
OB25 B7 00   STA    $00
OB27 BE 53   LDX    $53      portb = ( lcdtab[digit[3]]+1 ); /* decimal point at middle digit */
OB29 D6 08 00 LDA    $0800,X
OB2C 4C     INCA
OB2D B7 01   STA    $01
                    }
OB2F 9A     CLI
OB30 CD 09 68 JSR    $0968  CLI;      delay();
OB33 81     RTS
                    }

/********************************************

void display_psi(void)
/*
At power-up it is assumed that the pressure or vacuum port of
the sensor is open to atmosphere. The code in initio() delays
for the sensor and power supply to stabilize. One hundred A/D
conversions are averaged. That result is called xdcr_offset.
This routine calls the A/D routine which performs one hundred
conversions, divides the result by 100 and returns the value.
If the value returned is less than or equal to the xdcr_offset,
the value of xdcr_offset is substituted. If the value returned
is greater than xdcr_offset, xdcr_offset is subtracted from the

```

```

        returned value.
    */

    {
        while(1)
        {
            atodtemp = read_a2d(); /* atodtemp = raw a/d ( 0..255 ) */

            if ( atodtemp <= xdcr_offset )

            OB34 CD 09 7F JSR $097F
            OB37 3F 55 CLR $55
            OB39 B7 56 STA $56
            OB3B B0 5D SUB $5D
            OB3D B7 58 STA $58
            OB3F B6 5C LDA $5C
            OB41 A8 80 EOR #$80
            OB43 B7 57 STA $57
            OB45 B6 55 LDA $55
            OB47 A8 80 EOR #$80
            OB49 B2 57 SBC $57
            OB4B BA 58 ORA $58
            OB4D 22 08 BHI $0B57
            OB4F B6 5C LDA $5C
            OB51 B7 55 STA $55
            OB53 B6 5D LDA $5D
            OB55 B7 56 STA $56
            OB57 B6 56 LDA $56
            OB59 B0 5D SUB $5D
            OB5B B7 56 STA $56
            OB5D B6 55 LDA $55
            OB5F B2 5C SBC $5C
            OB61 B7 55 STA $55
            OB63 CD 09 4C JSR $094C
            OB66 B6 56 LDA $56
            OB68 B7 58 STA $58
            OB6A B6 55 LDA $55
            OB6C B7 57 STA $57
            OB6E B6 5E LDA $5E

            OB70 B7 9A STA $9A
            OB72 B6 5F LDA $5F
            OB74 B7 9B STA $9B
            OB76 CD 0B D2 JSR $0BD2
            OB79 BF 55 STX $55
            OB7B B7 56 STA $56
            OB7D 3F 89 CLR $89
            OB7F 3F 88 CLR $88
            OB81 3F 81 CLR $81
            OB83 3F 80 CLR $80
            OB85 9F TXA
            OB86 B7 82 STA $82
            OB88 B6 56 LDA $56
            OB8A B7 83 STA $83
            OB8C B6 59 LDA $59
            OB8E B7 8A STA $8A
            OB90 B6 5A LDA $5A
            OB92 B7 8B STA $8B
            OB94 CD 08 70 JSR $0870
            OB97 3F 90 CLR $90
            OB99 A6 01 LDA #$01
            OB9B B7 91 STA $91
            OB9D A6 86 LDA #$86
            OB9F B7 92 STA $92
            OBA1 A6 A0 LDA #$A0
            OBA3 B7 93 STA $93
            OBA5 B6 88 LDA $88
            OBA7 B7 8C STA $8C
            OBA9 B6 89 LDA $89
            OBAB B7 8D STA $8D
            OBAD B6 8A LDA $8A
            OBAF B7 8E STA $8E
            OBB1 B6 8B LDA $8B
            OBB3 B7 8F STA $8F
            OBB5 CD 08 B1 JSR $08B1
            OBB8 B6 96 LDA $96
            OBBA B7 55 STA $55
            OBBC B6 97 LDA $97

                MULTP[0] = MULCAN[0] = 0;
                MULTP[1] = atodtemp;
                MULCAN[1] = slope;
                mul32(); /* analog value * slope based on J1 through J3 */
                DVSOR[0] = 1; /* now divide by 100000 */
                DVSOR[1] = 0x86a0;
                DVDND[0] = MULCAN[0];
                DVDND[1] = MULCAN[1];
                div32();
                atodtemp = QUO[1]; /* convert to psi */

}

```

```

OBBE B7 56 STA $56
OBC0 BE 55 LDX $55      cvt_bin_dec( atodtemp ); /* convert to decimal and display */
OBC2 CD 0A 3F JSR $0A3F
OBC5 CC OB 34 JMP $0B34   }
OBC8 81 RTS }

/********************************************/

void main()
{
    initio(); /* set-up the processor's i/o */
    display_psi();
    while(1); /* should never get back to here */
}

OBCE9 CD 0A OC JSR $0A0C
OBCC CD 0B 34 JSR $0B34
OBCF 20 FE BRA $0BCF
OBD1 81 RTS
OBD2 BE 58 LDX $58
OBD4 B6 9B LDA $9B
OBD6 42 MUL
OBD7 B7 A4 STA $A4
OBD9 BF A5 STX $A5
OBDB BE 57 LDX $57
OBDD B6 9B LDA $9B
OBDF 42 MUL
OBEO BB A5 ADD $A5
OBEB B7 A5 STA $A5
OBE4 BE 58 LDX $58
OBE6 B6 9A LDA $9A
OBE8 42 MUL
OBE9 BB A5 ADD $A5
OBEB B7 A5 STA $A5
OBED 97 TAX
OBEE B6 A4 LDA $A4
OBFO 81 RTS
OBF1 3F A4 CLR $A4
OBF3 5F CLRX
OBF4 3F A2 CLR $A2
OBF6 3F A3 CLR $A3
OBF8 5C INCX
OBF9 38 58 LSL $58

OBFB 39 57 ROL $57
OBFD 39 A2 ROL $A2
OBFF 39 A3 ROL $A3
OC01 B6 A2 LDA $A2
OC03 B0 9B SUB $9B
OC05 B7 A2 STA $A2
OC07 B6 A3 LDA $A3
OC09 B2 9A SBC $9A
OC0B B7 A3 STA $A3
OC0D 24 0D BCC $0C1C
OC0F B6 9B LDA $9B
OC11 BB A2 ADD $A2
OC13 B7 A2 STA $A2
OC15 B6 9A LDA $9A
OC17 B9 A3 ADC $A3
OC19 B7 A3 STA $A3
OC1B 99 SEC
OC1C 59 ROLX
OC1D 39 A4 ROL $A4
OC1F 24 D8 BCC $0BF9
OC21 81 RTS
OC22 53 COMX
OC23 9F TXA
OC24 BE A4 LDX $A4
OC26 53 COMX
OC27 81 RTS
1FFE 0B C9

```

#### SYMBOL TABLE

LABEL	VALUE	LABEL	VALUE	LABEL	VALUE	LABEL	VALUE

ADDEND	006C	AUGEND	0070	CNT	0098	DIFF	007C
DIV151	08BF	DIV153	08CE	DIV163	08D0	DIV165	0905
DIV167	0906	DVDND	008C	DVSOR	0090	IRQ	091D
MINUE	0074	MNEXT	0882	MTEMP	0084	MULCAN	0088
MULTP	0080	QUO	0094	ROTATE	089C	SCI	0920
SUBTRA	0078	SUM	0068	TIMERCAP	091E	TIMERCMP	09E2
TIMEROV	091F	__LDIV	0BF1	__LongIX	009A	__MAIN	0BC9
__MUL	0000	__MUL16x16	0BD2	__RDIV	0C22	__RESET	1FFE
__STARTUP	0000	__STOP	0000	__SWI	091C	__WAIT	0000
__longAC	0057	adcnt	005B	add32	083C	addata	0008
adstat	0009	adzero	09EB	aregnthi	001A	aregnthlo	001B
arg	009D	atodtemp	0055	b	0000	bothbytes	0002
cvt_bin_dec	0A3F	ddra	0004	ddrb	0005	ddrc	0006
dectable	080A	delay	0968	digit	0050	display_psi	0B34
div32	08B1	eeclk	0007	fixcompare	09C7	hi	0000
i	0061	icaphi1	0014	icaphi2	001C	icaplo1	0015
icaplo2	001D	initio	0A0C	isboth	0002	j	0063
k	0065	l	0000	lcdbtab	0800	lo	0001
main	0BC9	misc	000C	mul32	0870	ocmphi1	0016
ocmphi2	001E	ocmple1	0017	ocmple2	001F	plma	000A
plmb	000B	porta	0000	portb	0001	portc	0002
portd	0003	q	0066	read_a2d	097F	scibaud	000D
scient11	000E	scint12	000F	scidata	0011	scistat	0010
sensor_index	0060	sensor_model	005E	sensor_slope	094C	sensor_type	0921
slope	0059	slope_const	081C	sub32	0856	tcnthi	0018
tcntlo	0019	tcr	0012	tsr	0013	type	0812
xdcr_offset	005C						

MEMORY USAGE MAP ('X' = Used, '-' = Unused)

```

0800 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX
0840 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX
0880 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX
08C0 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX

0900 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX
0940 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX
0980 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX
09C0 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX

0A00 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX
0A40 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX
0A80 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX
0AC0 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX

0B00 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX
0B40 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX
0B80 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX
0BC0 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX

0C00 : XXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXX XXXXXXXX----- -----
0C40 : ----- -----
0C80 : ----- -----
0CC0 : ----- -----
```

1E00 : ----- -----
1E40 : ----- -----
1E80 : ----- -----
1EC0 : ----- -----X-

1F00 : ----- -----
1F40 : ----- -----
1F80 : ----- -----
1FC0 : ----- -----XX

All other memory blocks unused.

Errors : 0  
 Warnings : 0

## **How to Reach Us:**

**Home Page:**  
[www.freescale.com](http://www.freescale.com)

**E-mail:**  
[support@freescale.com](mailto:support@freescale.com)

### **USA/Europe or Locations Not Listed:**

Freescale Semiconductor  
Technical Information Center, CH370  
1300 N. Alma School Road  
Chandler, Arizona 85224  
+1-800-521-6274 or +1-480-768-2130  
[support@freescale.com](mailto:support@freescale.com)

### **Europe, Middle East, and Africa:**

Freescale Halbleiter Deutschland GmbH  
Technical Information Center  
Schatzbogen 7  
81829 Muenchen, Germany  
+44 1296 380 456 (English)  
+46 8 52200080 (English)  
+49 89 92103 559 (German)  
+33 1 69 35 48 48 (French)  
[support@freescale.com](mailto:support@freescale.com)

### **Japan:**

Freescale Semiconductor Japan Ltd.  
Headquarters  
ARCO Tower 15F  
1-8-1, Shimo-Meguro, Meguro-ku,  
Tokyo 153-0064  
Japan  
0120 191014 or +81 3 5437 9125  
[support.japan@freescale.com](mailto:support.japan@freescale.com)

### **Asia/Pacific:**

Freescale Semiconductor Hong Kong Ltd.  
Technical Information Center  
2 Dai King Street  
Tai Po Industrial Estate  
Tai Po, N.T., Hong Kong  
+800 2666 8080  
[support.asia@freescale.com](mailto:support.asia@freescale.com)

### **For Literature Requests Only:**

Freescale Semiconductor Literature Distribution Center  
P.O. Box 5405  
Denver, Colorado 80217  
1-800-441-2447 or 303-675-2140  
Fax: 303-675-2150  
[LDCForFreescaleSemiconductor@hibbertgroup.com](mailto:LDCForFreescaleSemiconductor@hibbertgroup.com)

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners.  
© Freescale Semiconductor, Inc. 2005. All rights reserved.

