


- * Reference voltage (Vref) is grounded with capacitor of 0.1µF.
- * You can set LPF/HPF and Gain of the Amp.2 with external parts freely. (X1 to X100)
- * ENC-03W includes a charge switch to reset the external high-pass filter. (C1)
- * When you do not use AMP2, please short-circuit in AFB and APO, and connect AIN to Vref.

- X-axis:
- ④ APO X → ⑤ AFB X shorted
 - ⑤ AFB X → ④ APO X shorted
 - ⑥ AIN X → ⑧ Vref connected
- Y-axis:
- ⑪ AIN Y → ⑧ Vref shorted
 - ⑫ AFB Y → ⑬ APO Y shorted
 - ⑬ APO Y → ⑫ AFB Y connected



Timing Chart for Charge SW

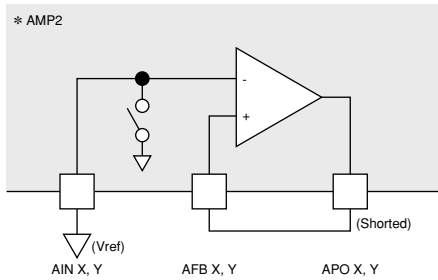